



2217419


Mini Pet Four Poster Bed

Parts and Hardware List

A.	Headboard	1 pc
B.	Footboard	1 pc
C.	Side Rails	2 pcs
D.	Wood Screws	8 pcs
E.	Phillips Head Screwdriver	1 pc
F.	Support Slats	3 pcs
G.	Mattress Board	1 pc
H.	Mattress	1 pc
I.	Posts	4 pcs
J.	Long Canopy Rails	2 pcs
K.	Short Canopy Rails	2 pcs
L.	Finials	4 pcs

- * Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- * Use the hardware Illustration to determine correct piece and size.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.

Hardware Illustration



D. Wood Screw




2217419

Mini Pet Four Poster Bed

Parts required

A. Headboard	1 pc	G. Mattress Board	1 pc
B. Footboard	1 pc	H. Mattress	1 pc
C. Side Rails	2 pcs	I. Posts	4 pcs
D. Wood Screws	8 pcs	J. Long Canopy Rails	2 pcs
E. Phillips Head Screwdriver	1 pc	K. Short Canopy Rails	2 pcs
F. Support Slats	3 pcs	L. Finials	4 pcs

1. **Attach Headboard & Footboard (A & B)** Insert the wood dowels of the Side Rails (C) into the pre-drilled holes in the Headboard (A) & Footboard (B). Align the pre-drilled holes in the blocks of the Side Rails (C) with the pre-drilled holes in Headboard (A) & Footboard (B). Secure in place with the Wood Screws (D) using the Phillips Head Screwdriver (E). Refer to illustration.
2. **Attach Support Slats (F)**. Place the ends of the Support Slats (F) into the pre-cut slots of the Side Rails (C). Refer to illustration.
3. **Attach Posts (I)**. Insert the exposed threads of Posts (I) into the pre-threaded holes in the posts of Headboard (A) & Footboard (B). Secure by turning in a clockwise direction. Refer to illustration.
4. **Attach Canopy (K,L) & Finials (L)**. Place Long Canopy Rails (J), with notched ends up, on top of Posts (I). With notched ends down, place Short Canopy Rails (K) on the Long Canopy Rails (J). Make sure the notched ends of Short Canopy Rails (K) face to the notched ends of Long Canopy Rails (J). Insert the exposed threads of Finials (L) through the pre-drilled holes in the Long Canopy Rails (J) & Short Canopy Rails (K). Align the pre-threaded holes in the top of Posts (I) with the exposed threads of Finials (L) and secure by turning in a clockwise direction. Refer to illustration.
5. **Install Cushion (G)**. Carefully place the Mattress Board (G) onto the Support Slats (F). Carefully place Mattress (H) onto the Mattress Board (G). Refer to illustration.

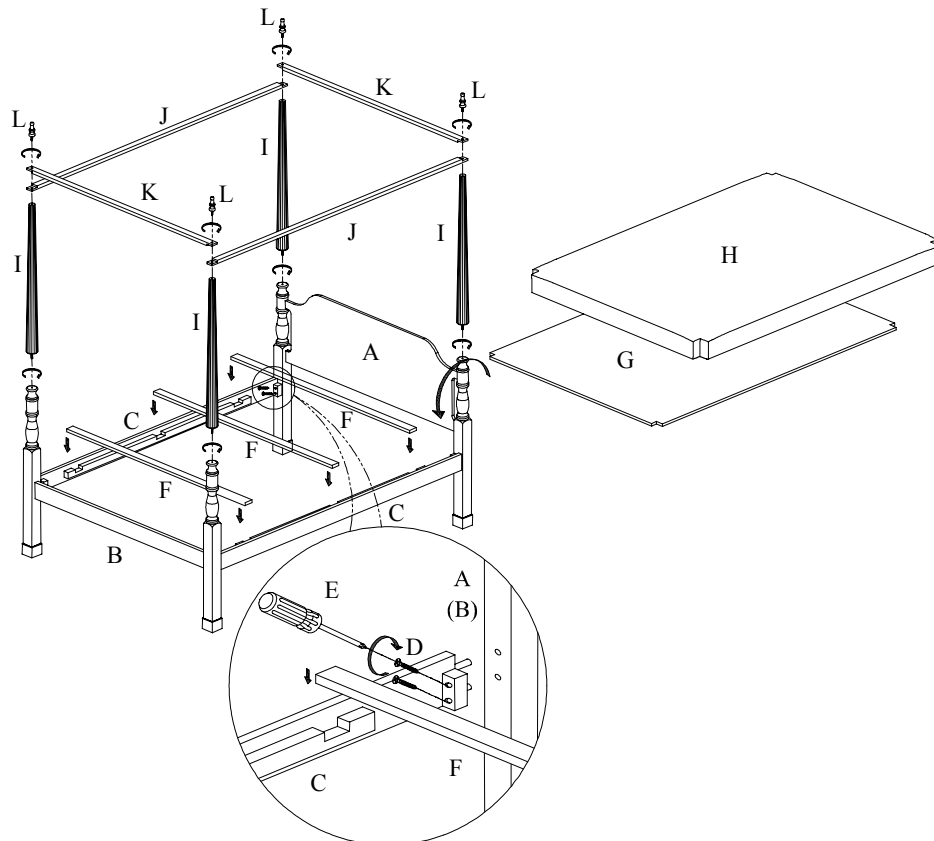

Illustration